

## LIGHT BALL OPERATING INSTRUCTIONS

Congratulations on your purchase of the Light Ball unit.  
Please read the following instructions carefully before use.

### INSTALLATION

For your convenience a mains plug with a 3 amp fuse has been supplied with this appliance. For your safety please observe the following information.

The Light Ball unit is designed to operate on AC mains supply between 220 and 240 volts, 50 Hz.

The wires in the mains lead are coloured in accordance with the following code:

GREEN AND YELLOW	EARTH
BLUE	NEUTRAL
BROWN	LIVE

### FITTING THE HALOGEN LAMP

The lamp is included separately and requires fitting before use. First remove the three screws located on the outer casing and remove the top section of the Light Ball.

### DO NOT TOUCH THE HALOGEN LAMP WITH YOUR BARE FINGERS.

Remove the lamp from its packaging and be sure to handle it with the foam padding which the lamp is wrapped in. Insert the lamp into the lamp socket (the two pin holes visible on the lamp holder). Do not switch on the power until the bulb is fitted and the top casing is replaced.

### IN USE

Plug the Light Ball into a suitable mains outlet, there is no on/off switch on the Light Ball unit. Position where people cannot touch it. Take care not to cover the Light Ball when in use.

**CAUTION: ALLOW THE LIGHT BALL TO COOL DOWN BEFORE MOVING OR ATTEMPTING TO REPLACE THE LAMP.**




### REPLACING THE LAMP

We recommend that you use only Acoustic Solutions replacement lamps which you can obtain by returning the order form below. If a lamp has failed from new, please call the Acoustic Solutions Helpline. When calling, please have the following information ready: place and date of purchase and receipt. It is important that the equipment is disconnected from the mains supply before replacing the lamp. The lamp is 240volt, 100watts Halogen, Ref No. GY6.35.

**UNDER NO CIRCUMSTANCES SHOULD THE WATTAGE OF THE LAMP EXCEED 100 WATTS.**

**CAUTION: DANGEROUS VOLTAGES EXIST INSIDE THIS UNIT. ONLY REMOVE THE COVER. TO REPLACE THE LAMP. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. DISCONNECT FROM THE MAINS SUPPLY TO REPLACE THE LAMP AND WHEN NOT IN USE.**

For more help with this product contact the Acoustic Solutions Helpline: 01327 340601. Please be advised this line is manned 9am to 4.30pm Mon-Fri.

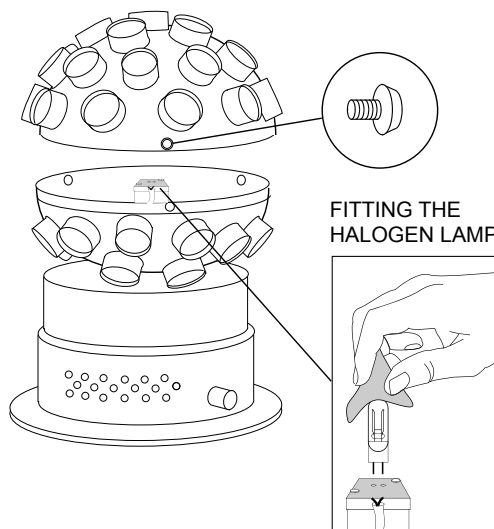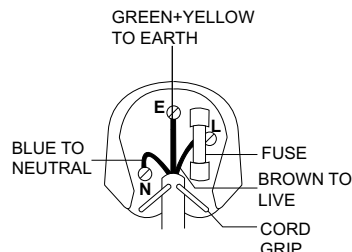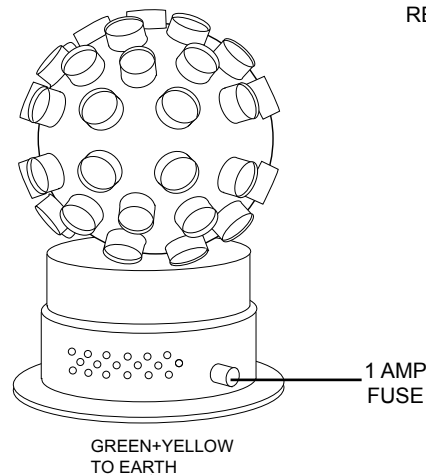

## LIGHT BALL REPLACEMENT LAMPS FOR SALE. £6.99 INC P+P

Please send me ..... replacement lamps at £6.99 each = £.....p

Payment method (tick one) ☐ Cheque ☐ Credit/Switch card

Credit card type ..... Number ...../...../...../.....

Card name ..... exp date.....

Issue number (switch only)..... Please charge my card £ .....p Signature.....

Name.....

Address.....

Post Code..... Tel No.....

Send completed form to:

Spares Orders. Acoustic Solutions Ltd, Grand Union Buildings, 54 High Street, Weedon Bec, Northants. NN7 4QD. UK  
Helpline Number +44 (0) 1327 340601.  
Email enquiries@acousticsolutions.co.uk